HUNTA®


HUNTA HARDWARE
BATHROOM LOCK
FITTING INSTRUCTIONS


INSTALLATION INSTRUCTIONS


Take care when using drills and woodworking equipment. Always wear safety eyewear and gloves.


- Draw a line down the centre of the door edge and use the lock body as a template to mark the top and bottom of the mortice **A**
- Mark the lock depth on the drill bit with tape and drill a set of bore holes along the centre line. the bit should then be the width of the body lock **B**
- Use a chisel to open the holes into a rectangle
- Insert the lock and mark the outline of the faceplate with a pencil
- Use the lock body to mark out the position of the key and spindle holes **C**
- Chisel a shallow recess for the face plate
- Drill the holes for the handle then fix the lock and handle into place
- Close the door until the lock catches the door frame and mark the position
- Extend lines full width of the door frame and match the striker plate with lines and mark around it
- Cut out the recess for striker plate
- Mark out and cut the slots for the latch and bolt as appropriate
- Fix the strike plate using screws supplied

Ensure all holes are drilled squarely and to the correct size and depth, otherwise operation of the lock may be impaired.

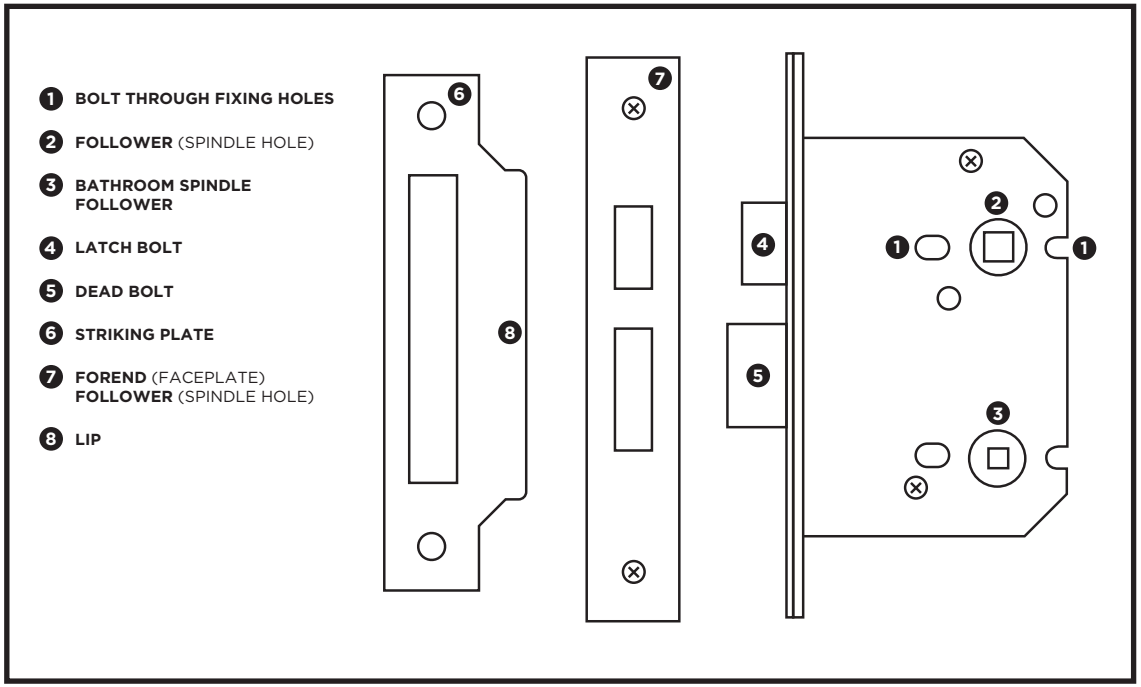

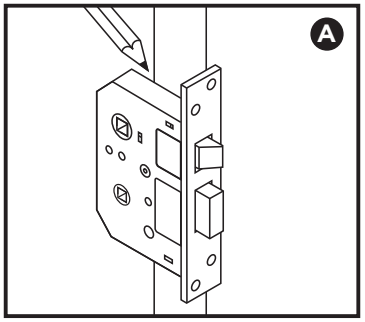

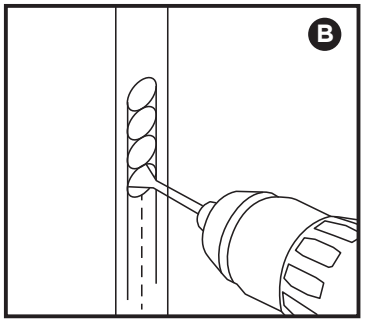

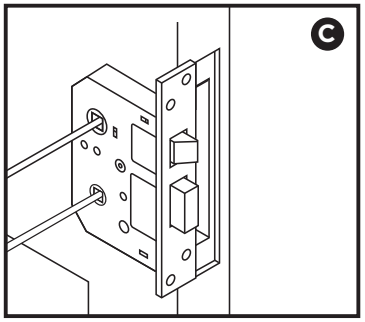

Copyright © 2023 • Bath lock Instruction 1.1