
HUNTA®


HUNTA HARDWARE
HINGE FITTING
INSTRUCTIONS


INSTALLATION INSTRUCTIONS


- Measure and mark the door and frame for the hinge positions
- Lay the hinge on the door edge, with the knuckle protruding slightly over the door edge. Mark round the hinge with a pencil
- Using a chisel or router cut out the template to the depth of the hinge leaf thickness.
- Lay the hinge in the mortise. Mark and pilot hole the screw positions. This is particularly important for hardwood doors.
- Using the screws provided fix the hinge leaf to the door. Repeat this process for the other hinges.
- Once all the hinges are fitted, hold the door up to the frame. Support the door so the required clearance is provided between the door and floor. Failure to support the door securely may result in lateral pressure deforming hinges during fitting.
- With the hinges opened, align the hinge leaf on the frame. Mark out and mortise as per the steps above.
- Ensure the screws are tightened. Use a screwdriver to make the last turns of each screw to prevent shearing.

Note: All holes must be mortised squarely to ensure correct alignment for smooth hinge operation

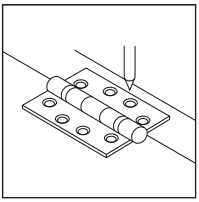

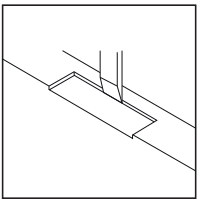

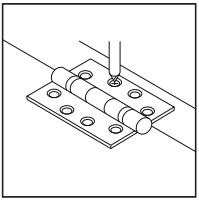

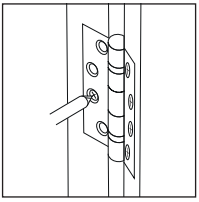

Copyright © 2023 • Hinge Instruction 1.1