HUNTA®


HUNTA HARDWARE
SASHLOCK FITTING
INSTRUCTIONS


INSTALLATION INSTRUCTIONS


Take care when using drills and woodworking equipment. Always wear safety eyewear and gloves.


- Measure and mark the height for the lock on both the door and frame.
- Placing the lock against the door edge, mark on the door the top and bottom of the lock body. On the door edge measure and mark the centre line.
- Measure the width of the lock body, and using a suitable drill bit, drill bore holes deep enough for the lock body to fit in the door.
- Carefully use a chisel to open the holes out into a rectangle
- Place the lock in the hole, and draw around the faceplate, outlining the shape to be cut out. Chisel the hole for the faceplate.
- Once the body and faceplate have been cut out, hold the lock against the door once more and mark the key and spindle holes.
- Drill the key and spindle holes.
- If door furniture is being used, mark any holes required and drill before installing the lock.
- Insert the lock in the door. Close the door until the latch hits the frame. Mark this position.
- Mark the striker against the frame. Mark the lips of the striker against the door edge.
- Cut the recess for the striker plate. Cut the holes for the dead bolt and latch bolt to the necessary depth.
- Fix the lock and striker securely with the screws provided.

Ensure all holes are drilled squarely and to the correct size and depth, otherwise operation of the lock may be impaired.

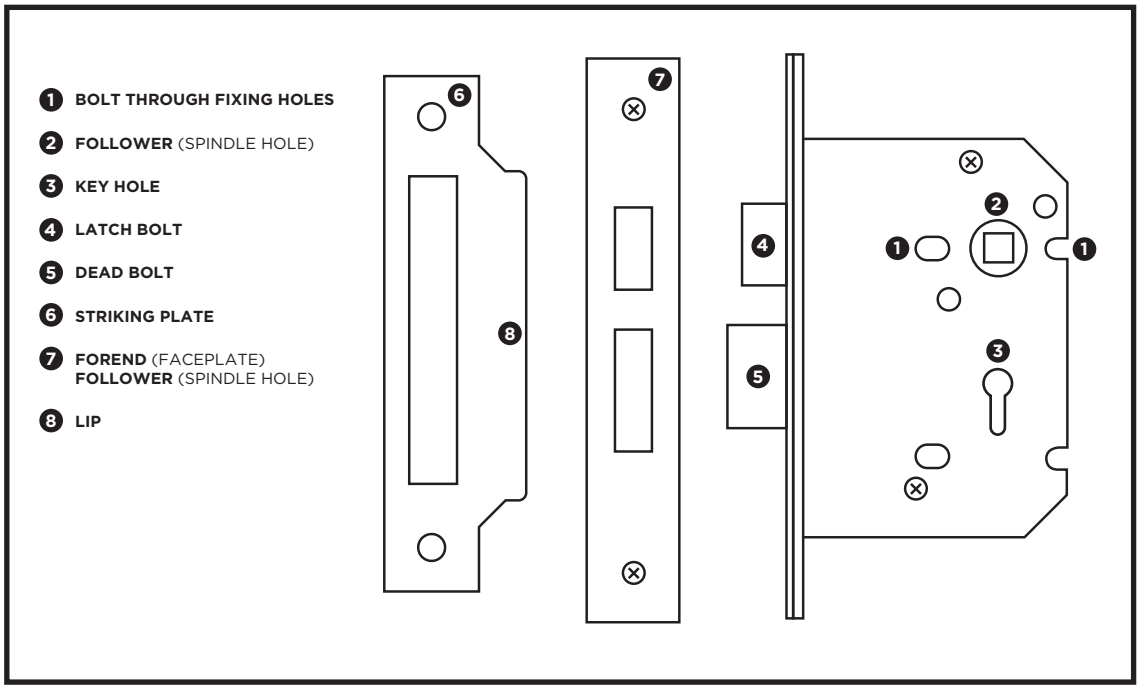

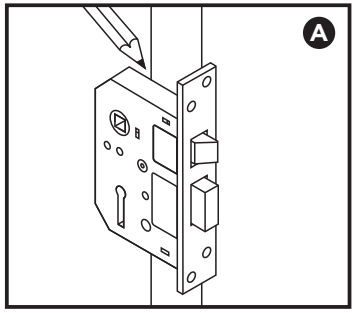

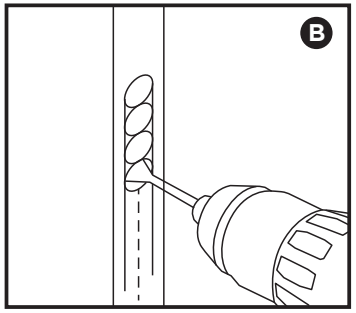

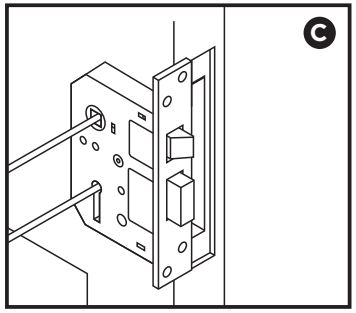

Copyright © 2023 • Sashlock Instruction 1.1