HUNTA®


HUNTA HARDWARE
ROUND ROSE HANDLE
FITTING INSTRUCTIONS

INSTALLATION INSTRUCTIONS

When fitting door handles on round rose it is important to check the compatibility of components. Most latches have holes pierced in their bodies to accommodate through fixing bolts for door handles. These are usually measured at 38mm and correspond with bolt holes in the door handle rose. It is also important to know the latch/lock size you have fitted. The key measurement is backset; the distance between the faceplate and the centre of the spindle hole (follower).

1. Measure the backset of your lock/latch (usually 45mm or 57mm). Measure and mark this on the face of the door with a pencil, having already decided the height position (usually 1.0m from floor).
2. Mark out fixing holes (**A**) at 38mm centres. These are the bolt positions that will pass through the latch case. If your latch does NOT have bolt through fittings, refer to **B**.
3. Using a 5.0mm diameter bit, drill holes **B** at 38.0mm centres as shown.
4. Using a 16mm diameter bit, drill hole **C** at the centre location previously marked. This is the spindle hole.
5. Put the spindle into one of the levers with the groove facing downwards and securely fix the grub screw, ensuring enough spindle is free to pass through door and to be secured in the opposing lever.
6. Place the lever to the door so the spindle passes through the latch/lock follower and lines up the holes on the rose with those pre-drilled in the door.
7. Place the second lever on the opposite side of door. Using both the bolts provided, connect the backplates, so both levers are secured firmly against the surface of the door.
8. Once the handles are securely fitted, pilot hole the screw holes through the remaining fixing points. Tighten the screws. It is recommended that the last turns are made by hand to prevent screw heads shearing off.
9. Tighten up grub screw on opposite lever and recheck all fixings are secure. If levers do not operate freely, check alignment of all components.
10. Place and screw on both outer rose covers.

Ensure all holes are drilled squarely and to the correct size and depth, otherwise operation of the lock may be impaired.

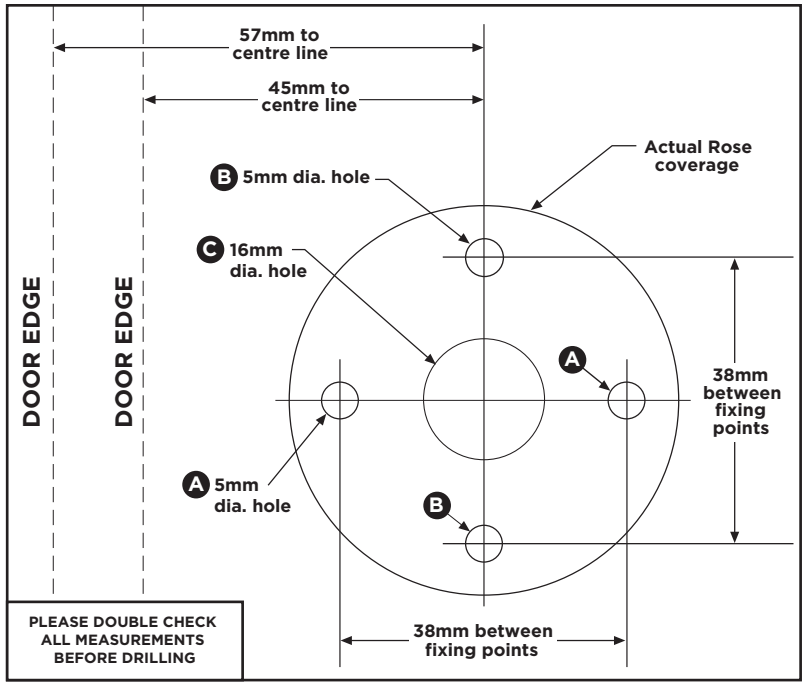











Copyright © 2023 • Round Rose Fitting 1.1